


BRExhaust™

A **MAGNAFLOW** GROUP COMPANY

INSTALLATION INSTRUCTIONS | PART NO. 106-0987

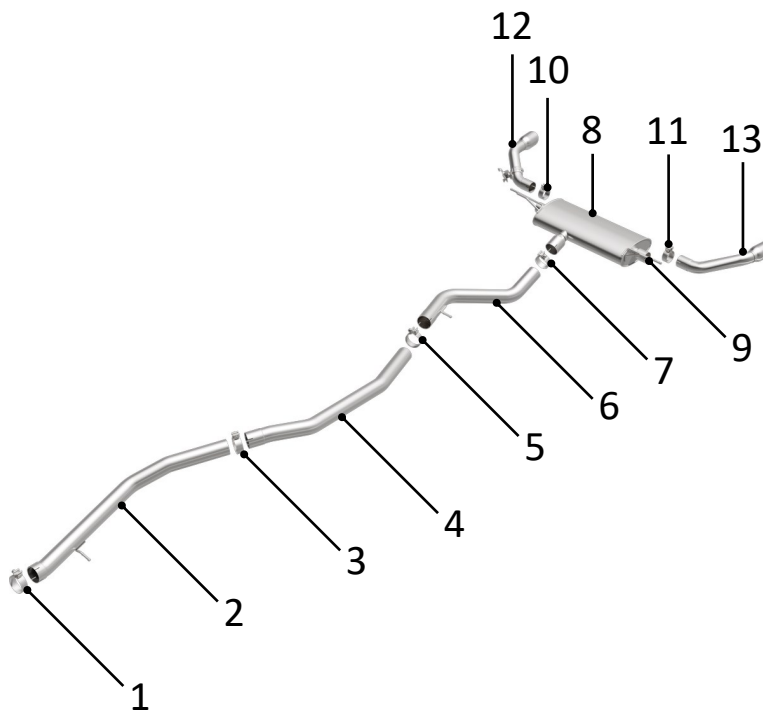

WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

STEP 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Disconnect the valve actuator from the valve assembly. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

STEP 2:

Attach **[2] Inlet Pipe Assembly** to existing isolator and exhaust with supplied **[1] Clamp**.

STEP 3:

Attach **[4] Intermediate Pipe** to **[2] Inlet Pipe Assembly** with supplied **[3] Clamp**.

STEP 4:

Attach **[6] Intermediate Pipe Assembly** to existing isolator and **[4] Intermediate Pipe** with supplied **[5] Clamp**.

STEP 5:

Attach **[8] Muffler Assembly** to existing isolators, ground strap, and **[6] Intermediate Pipe Assembly** with supplied **[7] Clamp** and **[9] Hardware**.

STEP 6:

Attach driver side **[13] Tailpipe Assembly** to **[8] Muffler Assembly** with supplied **[11] Clamp**.

STEP 7:

Attach passenger side **[12] Tailpipe Assembly** to **[8] Muffler Assembly** with supplied **[10] Clamp**.

STEP 8:

Reconnect existing valve actuator to passenger side **[11] Tailpipe Assembly** valve assembly reusing existing hardware.

STEP 9: Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 10: Tighten all clamps and bolts starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)



BRExhaust recommends
professional installation
for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056

www.brexhaust.com

REV #000 DATE 10/08/2025